



Note: (JP16 & 17) Port 170 is the default port when combining the H8-267 with the H8-H17 or with the H8-267 disk controller. Port 270 is used for a second H8-Z37 controller.

H8-Z37 CONTROLLER Copyright Norberto Collado - 2011 KOYADO.COM	
Title: H8-Z37 Schematic Sheet 1 of 1	
Drafted by: Kenneth L. Owen, May 2015	
Rev: 1.0	