

H8 Z80 Front Panel Speed Select

Procedure to change CPU frequency via H8 Front Panel.

On the front panel key-in the following sequence:

- Press MEM and enter “040 362”
- Press OUT
 - CPU speed is 2MHz
- Press MEM and enter “060 362”
- Press OUT
 - CPU speed is 4MHz
- Press MEM and enter “044 362”
- Press OUT
 - CPU speed is 8MHz
- Press MEM and enter “064 362”
- Press OUT
 - CPU speed is 10MHz or 16MHz depending on jumper setup.

❖ Note: Port is 362Q as the same as in the H89.

H8 Z80 Front Panel Speed Select

