



For 80H insert jumper on A6,A5, & A4.

I/O Port: 80H-9FH

Note: /IORQ is enabled on Z80 V3.x Please add jumper to enable this capability. For Z80 V1.x, set /IORQ jumper to position 2-3 (/IORQ-FAKE) Also applies to Heathkit/Trionyx Z80 boards.

Note: Placed resistor close to the IDE connectors.

Note: Placed capacitor close to the IDE connectors.

