



Note: DB9 connector uses a cable to connect to the 5 pin header

Note: Use P12 connector to program Micro-controller

RTS	1
TX	2
RX	3
DTR	4
DTR OFF	5

ATX-POWER (P1) connections:
 1: +12V
 2: GND
 3: GND
 4: GND

+5v Adaptor (CON1) connections:
 1: +5V
 2: GND
 3: GND

I2C TERMINATION:
 SDA: 2k (R6)
 SCL: 4.7k (R7)

I2C ADDRESS: 0XAE