


H89-Z37 Rework

For Rev 0.2 Boards

Solder wire between
Pin 4 and pin 11

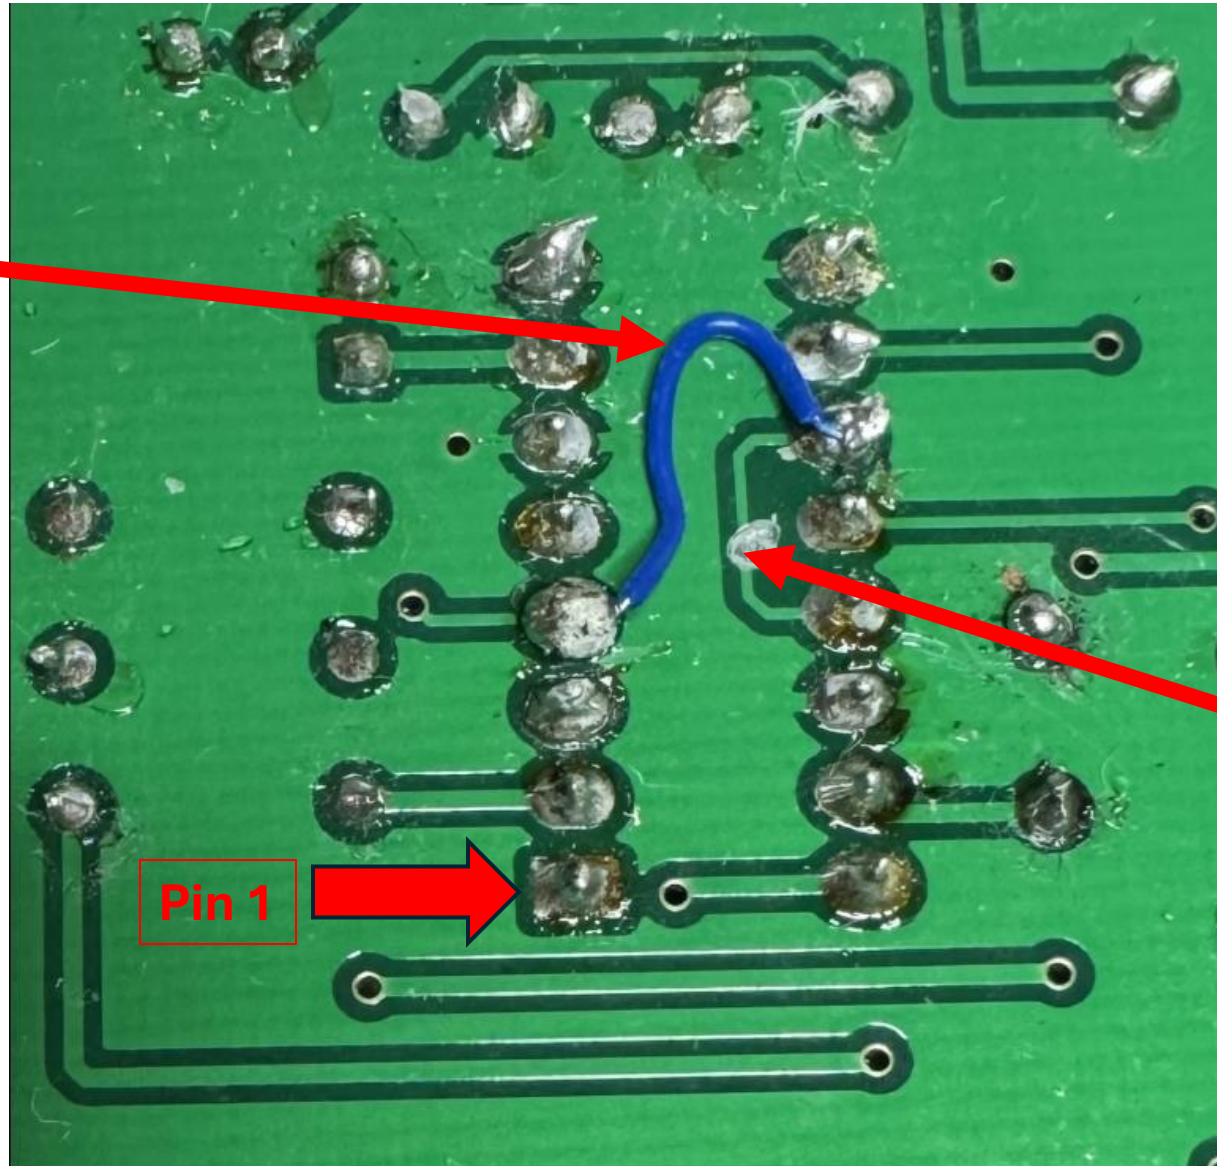

Cut trace between
Pin 11 and pin 13.

Pin 1